


DISASSEMBLY OF COMPRESSOR

1. REMOVE FELT

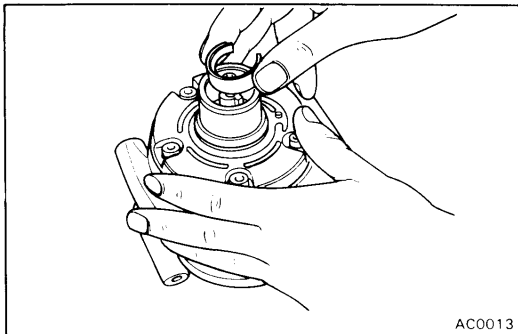

2. REMOVE SNAP RING

Using SST, remove the snap ring.
SST 07714-84020

