


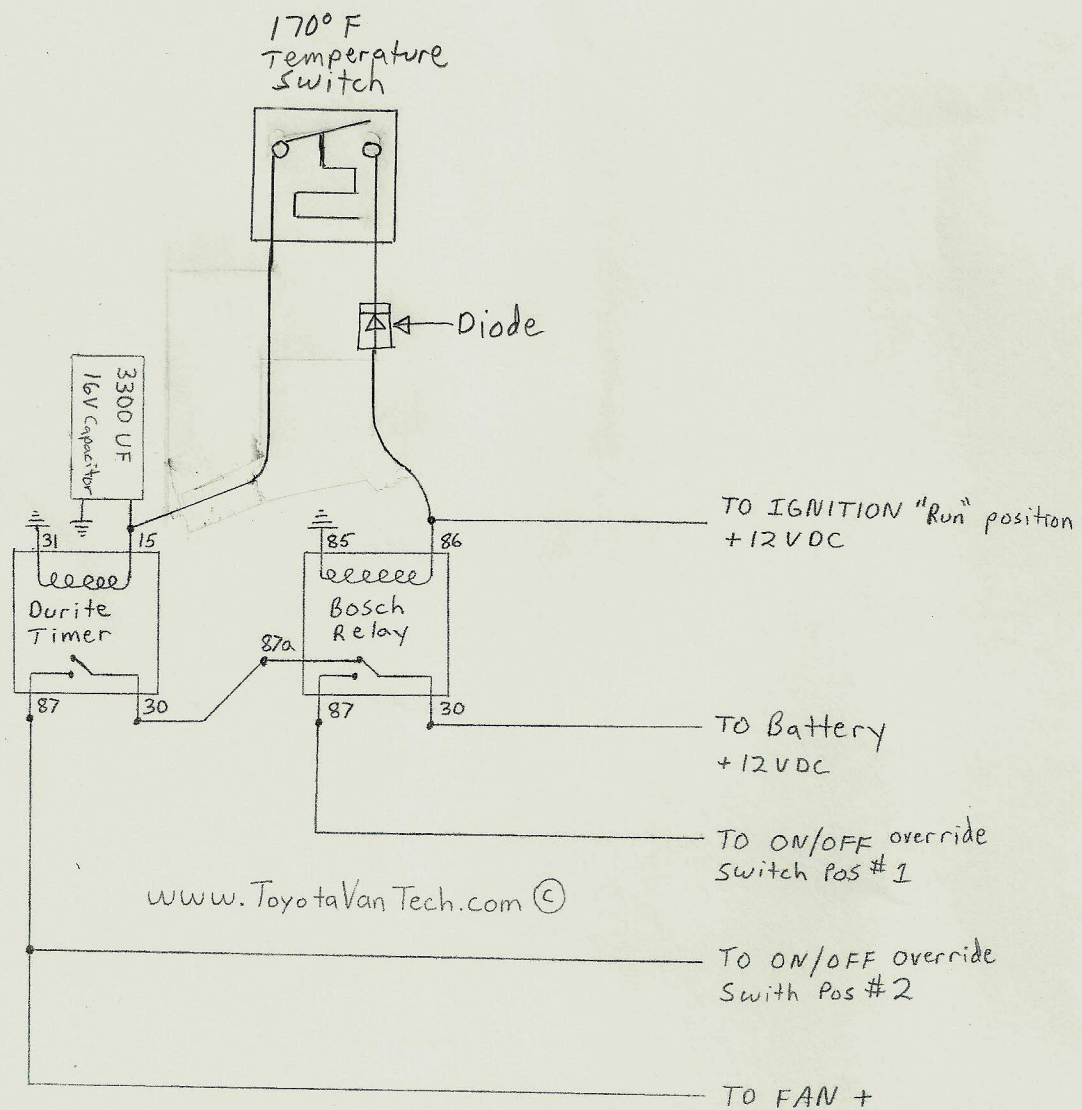

Turning ignition switch to "Run" will arm circuit & enable override switch.
At this time fan will only run if over ride switch is turned "on". If coolant is over 170°F
Turning ignition switch to "Acc" or "off" will disable override switch & activate timer. Timer will run fan for 15 minutes then shut down automatically.